

COMMENT INVERSER LES PORTES (3saisons)

Votre porte a été prévue pour s'ouvrir d'un côté spécifique, soit vers la droite ou vers la gauche. Toutefois il est possible de les inverser.

INFORMATION GÉNÉRALE

De l'extérieur, la **PORTE GAUCHE** ouvre vers la droite alors que la **PORTE DROITE** ouvre vers la gauche. Les roulettes sont toujours en bas. Le côté avec les ailettes se place du côté du cadre.

Les 2 panneaux vitrés sont identiques sauf pour l'emplacement de l'interlock. L'interlock est la partie verticale munie d'une brosse. L'interlock du panneau vitré coulissant fait face à l'extérieur du solarium alors que l'interlock du panneau fixe fait face à l'intérieur. Lorsque les portes sont fermées, les interlocks sont presque vis à vis l'un de l'autre. Les interlocks servent à rendre étanche l'espace entre le panneau fixe et le panneau coulissant.




POUR INVERSER LES PORTES il faut inverser les interlocks (explications au prochain paragraphe), puis inverser l'emplacement des panneaux de verre dans le cadre de porte. Le moustiquaire peut être placé des 2 côtés puisqu'il a des roulettes dans le haut et dans le bas. En le pivotant de haut en bas, la poignée sera à la bonne place mais il faudra tout de même retirer la quincaillerie afin d'inverser le crochet.

POUR INVERSER LES INTERLOCKS :

Retirez le moustiquaire, le panneau coulissant et le panneau fixe du cadre de porte.

Pour chacun des panneaux vitrés,

- À l'aide d'un tournevis, retirez la vis du haut et la vis du bas puis retirez le côté vertical sur laquelle se situe l'interlock. (S'il est coincé, utilisez un maillet de caoutchouc et une baguette de bois pour le dégager)
- Pivotez cette pièce de haut en bas, de façon à ce que l'interlock soit du côté opposé.
- Insérez-la sur le panneau en prenant soin de replacer la bande d'étanchéité puis, remettez les vis à l'aide d'un tournevis.

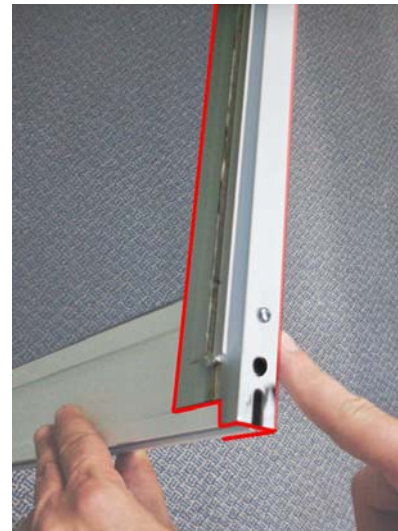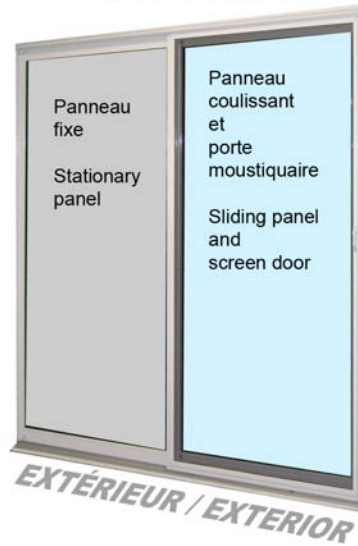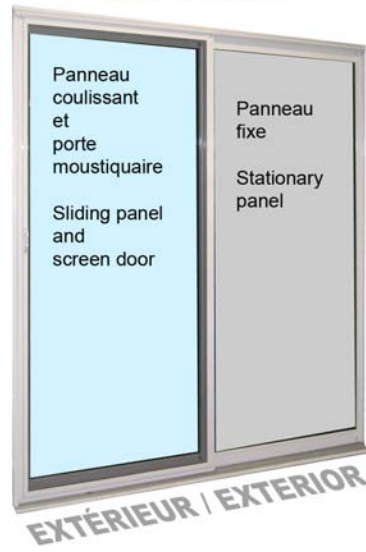

HOW TO REVERSE THE DOORS (3 seasons)

Your door is designed to open either towards the right or the left. However you can reverse them.

GENERAL INFORMATION

From the outside, the **LEFT DOOR** opens towards the right and the **RIGHT DOOR** opens towards the left.

The 2 glass panels are identical except for the position of the interlock. The interlock is the vertical part on which there is a brush. The interlock of the sliding panel faces outside the solarium and the interlock of the stationary panel faces inside. When the doors are closed, the interlocks are almost face to face, making the panels airtight.

TO REVERSE THE DOORS you have to reverse the interlocks (explication in next paragraph), and reverse the panels in the doorframe. The screen panel can be placed on either side since it has sets of wheels at the top and at the bottom. By turning it upside down, the handle will be at the good place but you will have to remove it to reverse the hook.

TO REVERSE THE INTERLOCKS:

Remove the screen panel, the glass sliding panel and the stationary panel from the doorframe.

On each glass panel;

- Use a screwdriver to remove the 2 screws and pull out the vertical side that has the interlock. (You might need to use a rubber mallet and a piece of wood)
- Turn this piece upside down so that the interlock faces the opposite side.
- Insert it on the panel, making sure to readjust the rubber gasket along the edge of the glass. Put the 2 screws back in with a screwdriver.